

4 SEATER PICNIC TABLE ASSEMBLY INSTRUCTIONS



1 Prepare your workspace. Set the table top aside and lay out all remaining parts as shown in the image below. Assemble on a flat, level surface to ensure your table sits evenly once complete. Each part is labelled to help you align the correct faces together - "A" to "A", "B" to "B", "C" to "C", and so on.

Check that these markings are visible and correctly matched before you begin. This will make the later steps easier and ensure everything fits securely.



2 Assemble the frame. Once you're happy with the layout, bolt the legs to the seat bases using the M8 x 160mm bolts, washers and nuts provided. Use two bolts per leg and tighten them with a spanner or wrench. Do not over-tighten yet - leaving a little movement in the frame helps with alignment when fitting the table top.



3 Fit the table top. Before lifting the table top into position, check the corresponding marks on both the legs and the underside of the table top - these indicate the correct alignment.

Once matched, carefully lift the table top onto the legs, ensuring it sits flat and even.

Tip: Two people are recommended for this stage to avoid strain or accidental damage to the components.

4 SEATER PICNIC TABLE ASSEMBLY INSTRUCTIONS



4 Secure the table top. Check that the legs sit firmly into each corner of the frame. Using the M8 x 140mm bolts, washers and nuts provided, secure the table top to the legs.

Insert all bolts before fully tightening to ensure proper alignment, then tighten each one securely.



5 Final adjustments and finishing touches. Once you're satisfied with the positioning of all components, fully tighten all bolts and nuts to lock the frame into place. Finally, push the domed nut caps onto the exposed ends of each bolt to give a neat, finished appearance and prevent injury. Your picnic table is now ready for use.

Tip: Do not fit the dome nut caps until the final stage.

CARE & MAINTENANCE

To keep your Cladco picnic table in great condition:

- ✓ Check all fixings periodically and re-tighten where necessary, especially after heavy use or adverse weather.
- ✓ Clean using mild soapy water and a soft brush or cloth. Avoid bleach or abrasive cleaning pads.
- ✓ If your table is left outdoors permanently, rotate it occasionally to help reduce uneven wear from sunlight and rain exposure.

With a little care, your Cladco 4 seater picnic table will provide years of durable, maintenance-free use.

